


# QUICK USER GUIDE

## CHEST FREEZER




**EN** More guidelines: Scan the QR Code to view the manual. You can find the QR code on the appliance.


---

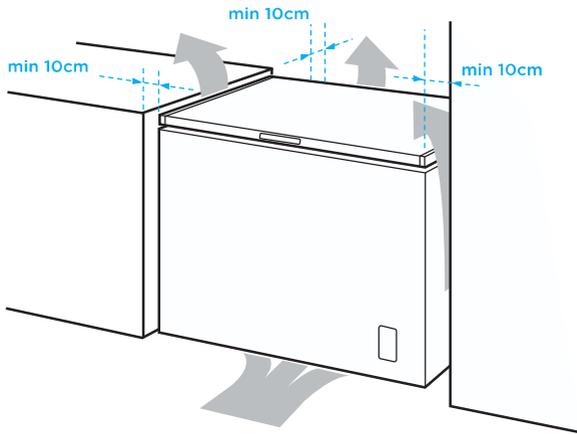


**FIG. 1**

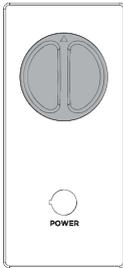

**FIG. 2**

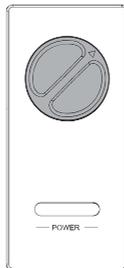

**FIG. 3**

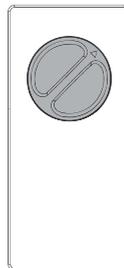

## ATTENTION

To ensure your safe usage, please read the safety instruction manual before use !

# CONTENTS

PRODUCT INSTALLATION -----	02
OPERATION INSTRUCTIONS -----	03
STORING FOOD-----	04
MAINTENANCE AND CLEANING-----	05
CUSTOMER CARE AND SERVICE -----	05

# PRODUCT INSTALLATION

## Before the first use

The packaging must be undamaged. Check the device for transport damage.

Do not connect a damaged device under any circumstances. In case of damage, please contact the supplier.

### 1. Removing the packaging

Remove all packaging materials and any promotional stickers.

Recycling is better for the environment, so keep paper and plastic waste separated.

### 2. Placing the appliance

Place the product in a well ventilated room with a flat surface. See the manual for more information.

### 3. Levelling the appliance

Ensure that the appliance is level. If necessary, adjust the left and right leveling feet.

### 4. Connecting the appliance

After levelling the appliance, leave it standing for at least 2 hours before inserting the plug in the socket.

### 5. Cleaning the appliance

In the meantime, clean the interior of the appliance with a damp cloth and warm water containing some washing-up liquid, all-purpose cleaner or soda.

Wipe the interior once more with a damp cloth using clean water and then thoroughly dry everything.

When installing unit, keep distances around refrigerator according to detailed drawing and recommendations in user manual.

#### **ATTENTION**

The product dimensions/specifications can also be obtained by scanning the QR code on the nameplate to access the electronic manual.



This refrigerating appliance is not intended to be used as a built-in appliance.

- Depending on the climate class, this refrigerator is intended to be used at an ambient temperature range as specified in the following table.
- The product may not operate properly at temperatures outside of the specific range. You can find the climate class on the product label.

Climate Class	Ambient Temperature
SN	+10 °C to +32 °C
N	+16 °C to +32 °C
ST	+16 °C to +38 °C
T	+16 °C to +43 °C

# OPERATION INSTRUCTIONS

## Use and functions


### Temperature Control

#### Description

##### “POWER” Indicator Light (\*)

Connect the freezer to power supply and “Power” indicator will shine.


The interior temperature of the freezer is adjusted through the thermostat knob, Clockwisely rotate the thermostat knob and the interior temperature will drop.

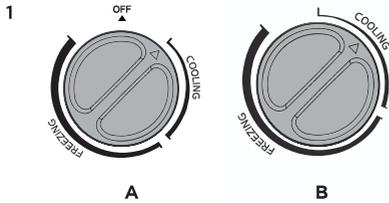

“COOLING” means cooling zone

“FREEZING” means the freezing zone.


“ OFF ” = stopping working.(\*)

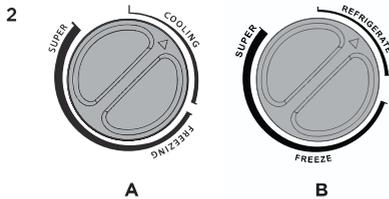

“COOLING” means cooling zone

“FREEZING--SUPER” means the freezing zone.

When set the thermostat knob to “SUPER” position, the chest freezer enters into super freeze mode, during this mode the compressor keeps running without interruption.

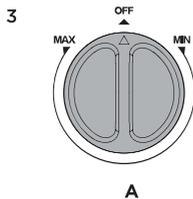

“ MIN ” = Lowest setting, minimum cold

“ MAX ” = Highest setting, maximum cold

“ OFF ” = stopping working.(\*)

(\*)This feature varies depending on the model purchased



During high ambient temperatures e.g. on hot summer days. It may be necessary to set the thermostat to the Coolest setting. This may cause the compressor running continuously in order to maintain a low temperature in the cabinet.

**Do not store fluids in bottled or closed containers Items such as bottled beer, beverages, etc.**

# STORING FOOD

Type	Target storage temp. [°C]	Appropriate food
Fridge	$+2 \leq x \leq +8$	Eggs, cooked food, packaged food, fruits and vegetables, dairy products, cakes, drinks and other foods are not suitable for freezing.
	$x \leq -18$	With freezing capacity, fast freezing speed, can quickly freeze and store food. Suitable for frozen fresh food such as seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products. Recommended for 3 - 6 months, the longer the storage time, the worse the taste and nutrition.
	$x \leq -18$	Without freezing capacity. Suitable for frozen fresh food such as seafood (fish, shrimp, shellfish), freshwater aquatic products and meat products. Recommended no more than 3 months.
	$x \leq -12$	Only suitable for medium-term storage of already frozen food, e.g. ice cream. Recommended no more than 1 month.
	$x \leq -6$	Only suitable for refrigeration, and short-term storage of small quantities of already frozen food. Recommended no more than 1 week.
O-star	$-6 \leq x \leq 0$	Fresh pork, beef, fish, chicken, some packaged processed foods, etc. (recommended to eat within the same day, preferably no more than 3 days). Partially encapsulated processed foods (non-freezable foods).
Chill	$-3 \leq x \leq +3$	Fresh/frozen pork, beef, chicken, freshwater aquatic products, etc. (7 days below 0 °C and above 0 °C is recommended for consumption within that day, preferably no more than 2 days). Seafood less than 0 for 15 days, it is not recommended to store above 0 °C.
Fresh food	$0 \leq x \leq +8$	Fresh pork, beef, fish, chicken, cooked food, etc. (Recommended to eat within the same day, preferably no more than 3 days)
Wine	$+5 \leq x \leq +20$	Red wine, white wine, sparkling wine, etc.

# MAINTENANCE AND CLEANING

Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.

The dust on the back of the unit at least once a year to avoid hazard by fire, as well as increased energy consumption.

Check the door gasket regularly to make sure there is no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.

The interior of the product should be cleaned regularly to avoid odor.

Use a soft cloth or sponge to clean the interior of the appliance with a solution of two tablespoons of baking soda mixed in a 1 liter of warm water. Rinse with clean water and wipe dry. After cleaning, leave the door open to allow it to air dry naturally before restoring power.

For hard-to-reach areas in the appliance, it is recommended to clean them regularly with a soft cloth, soft brush, etc. When necessary, use auxiliary tools (such as thin sticks) to ensure no contaminants or bacteria accumulate in these areas.

Wipe the outer surface of the product with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.

Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the fridge surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.

Do not rinse directly with water or other liquids during cleaning to avoid short circuits or affect electrical insulation after immersion.

# CUSTOMER CARE AND SERVICE

- If you want to return or replace the product, please contact the store where you bought it. (Remember to bring the purchase invoice.)
- Detailed information on the warranty period and terms of warranty in your country is available from our aftersales service, your retailer or on our website.
- The contact details for Customer Service can be found in the enclosed Customer Service directory.
- Spare parts are available for a minimum period of seven years after the final version of the model has been placed on the market. Door seals are available for a period of ten years.
- The model information in the product database, as well as the model identifier, can be obtained through a weblink scanned by a QR code, if any, on the energy efficiency label of the product.
- For more information about the energy efficiency of the appliance, visit <https://eprel.ec.europa.eu> and search using the model name. (Only for Europe)
- The model name can be found on the rating label of the appliance.

**comfee'**  
*...is how I feel!*